


## INSTALLATION GUIDE


### SE-224-XT Series

Version: 1.0.1


#### COMPONENTS

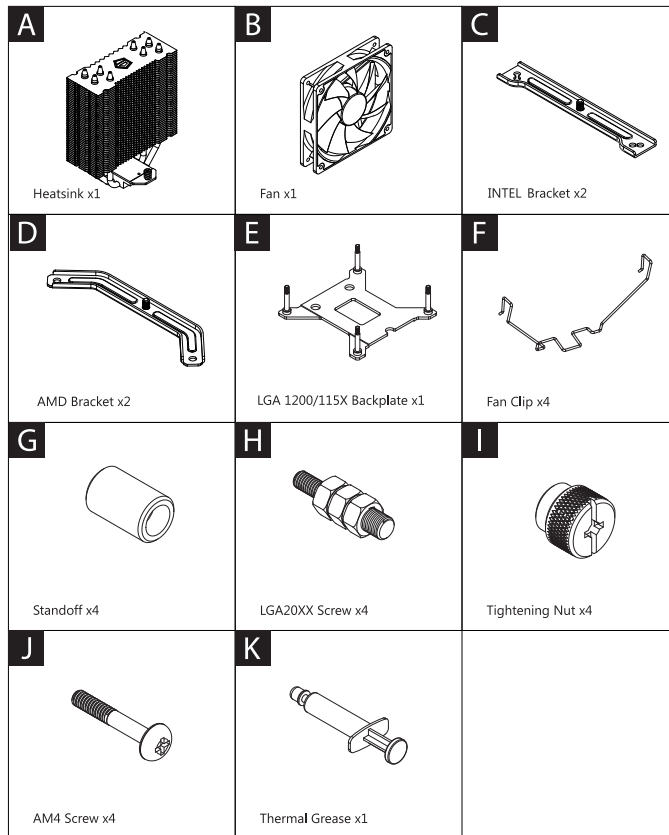

#### AMD AM4

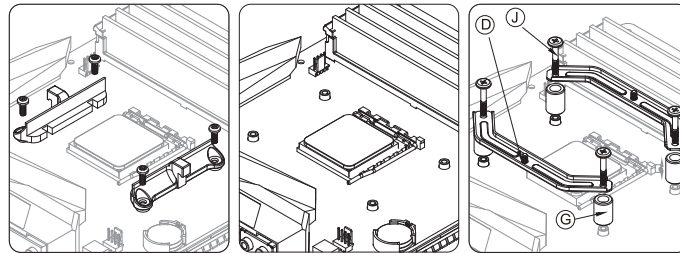


Remove the original AMD plastic retention frame, but keep the backplate; put the standoff on and then secure the AMD bracket with screws.

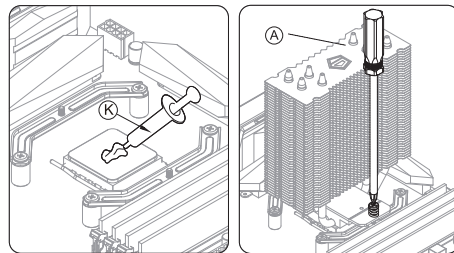


Apply a thin layer of thermal grease onto the CPU surface, and then secure heatink.

#### INTEL LGA1200/115X

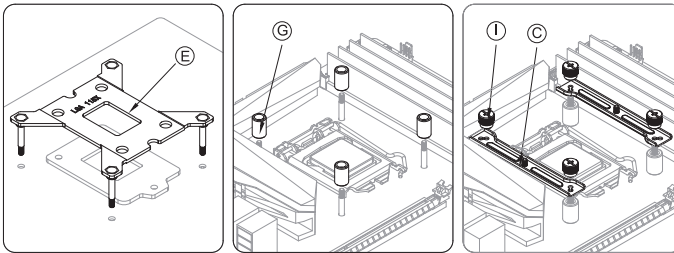


Put the backplate through the back of the motherboard; put on the standoffs and then secure the LGA115X brackets by the tightening nuts.

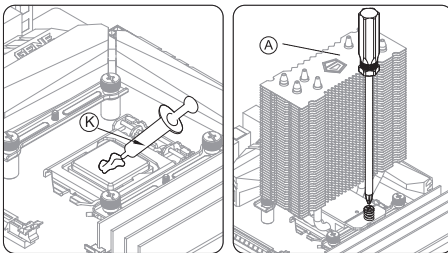


Apply a thin layer of thermal grease onto the CPU surface, and then secure heatink.

#### INTEL LGA20XX

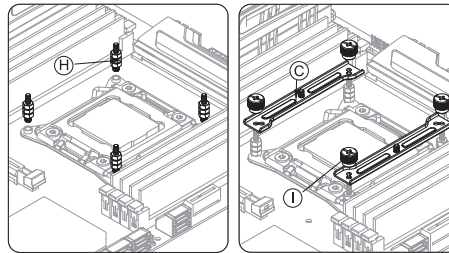


Thread in the LGA20XX screws; put on the brackets and fasten by tightening nuts.

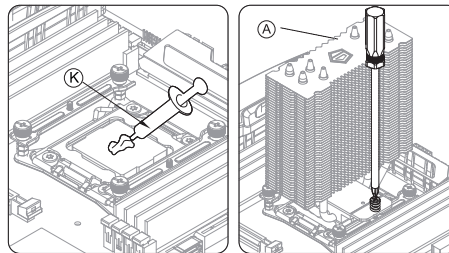

Apply a thin layer of thermal grease onto the CPU surface, and then secure heatink.

#### FAN MOUNTING & CONNECTION

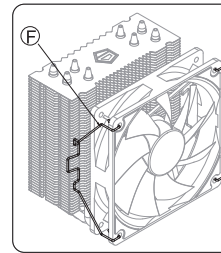

Secure the fan to the heatsink with fan clips.

If You Have Questions,

1. Please ask for professional help if you don't know how to install.
2. Make sure you're working on a power-off PC.
3. If you have any doubt about components list or product itself, please contact your original reseller/retailer/etailer.
4. ID-COOLING is always ready to offer our support. You can find the contact information below.
5. Descriptions are for your reference. Different models may vary in terms of components list.

ID COOLING LIMITED

www.idcooling.com  
support@idcooling.com  
www.facebook.com/idcooling.global  
www.twitter.com/idcooling



idcooling



idcooling.global